


Kodak Zi8

Video Camera

Instructions:

- 1 Insert the SD card into the SD card slot of the camera
- 2 Turn on power by pressing the power button
- 3 Press the recording button to start your recording session
- 4 Press the review mode button for video review. Move the control stick with the red button up/down to zoom in and out
- 5 Press the delete button to erase unwanted images/video
- 6 To charge, plug the camera into a computer insert USB or SD card

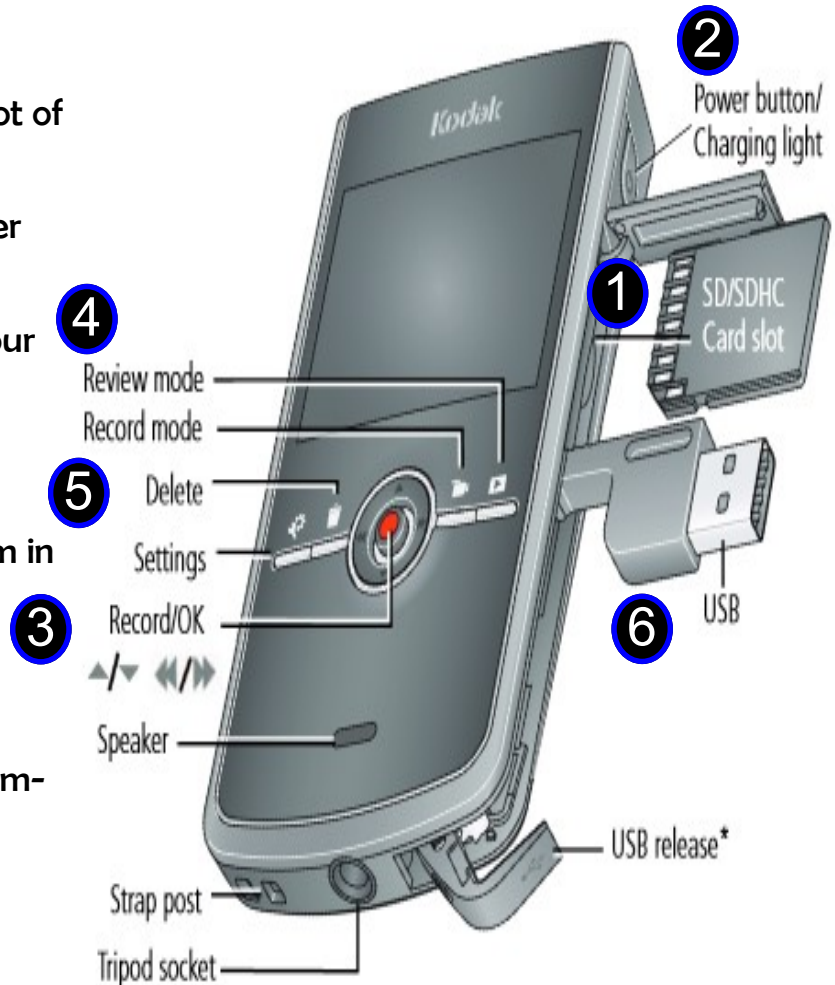

Specifications:

Energy efficiency: 0.01 kWh

Battery life: 3 hours

Media type: 8GB SD card
(Included)

Reminders:

- Turn off camera when not in use
- Place in case when not in use
- Remember to remove your video files before returning

724-946-6000

www.westminster.edu/lis

If found, please return to the LIS Help Desk at McGill Library, Westminster College

LIS ID:

What goes in the Kodak Zi8 case?



Kodak Zi8 Camera



AC Charger



USB Power Cable



AV Composite Cable



HDMI Cable



8 GB SD Card



Microphone Attachment

724-946-6000

www.westminster.edu/lis

If found, please return to the LIS Help Desk at McGill Library, Westminster College

LIS ID: