


PANASONIC Rx-ES25 CD/Audio Cassette Player

Basic Operations:

- 1 Plug Power Cord into back of player.
- 2 Turn On Power by pressing the power button.
- 3 To insert/eject a CD, push the CD eject button.
- 4 To insert/eject a cassette, push the deck eject button.
- 5 To listen to your audio, press the play button for either tape or CD.
- 6 To search/change tracks, press the <</> buttons.
- 7 To lower/raise the volume, hit the + or - button.

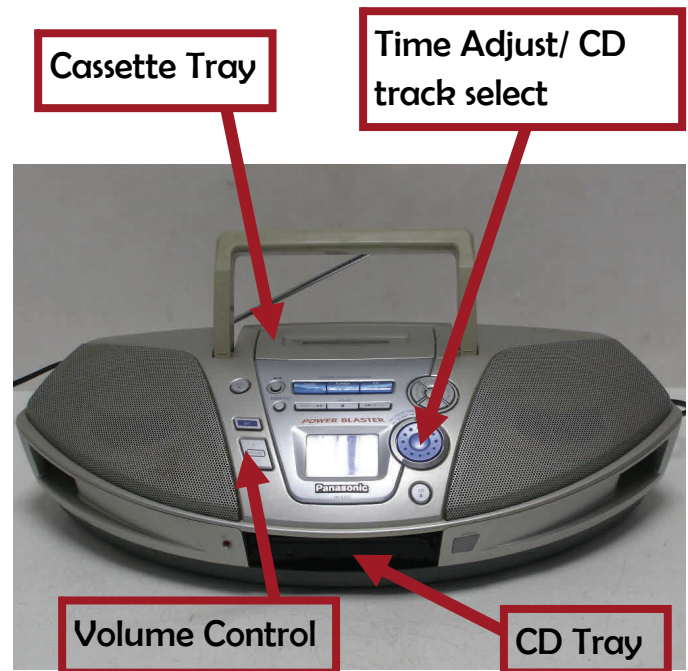

Recording:

- 8 If you wish to record, press the recording button to start your recording session.
 - 9 To stop recording, press the stop button.
- To play back a recording, press the play button.

Radio:

To select radio stations, use rewind and forward buttons.

- 10 To change between FM and AM, press the tuner band button.



Reminders:

- Remove cassette/CD before returning
- FM Range– 87.9-107.9
- Can be used with 4 AA batteries instead of AC power cable.

Specifications:

Energy efficiency: 0.01 kWh

AV ID:

What goes in the Panasonic RX-ES25 CD/Audio Cassette Player case?



Panasonic CD/Audio Cassette
Player



Power cord