

Marantz CDR300 Portable CD Recorder

To Record:

- 1 Plug in the power cord and slide the power button to turn on.
- 2 Push OPEN/CLOSE and insert a blank CD-R or CD-RW (be sure that the disk is capable of either 1X or 2X record speeds).
- 3 Turn off the speakers.
- 4 Select appropriate input:
 MIC—If using the XLR connections
 LINE—If using the 1/4 inch connections
 INT—If using the built-in microphone
- 5 Press REC MODE on top of unit.
- 6 Turn the SELECT control wheel until “RECORD” is displayed on the digital screen and press on the wheel.
- 7 Push the RECORD button when you are ready to begin recording.
- 8 When you finish, press the STOP button.



To Finalize:

- 9 Press STOP.
 Press FINALIZE.
 Press RECORD.

Specifications:

Energy efficiency: 0.03 kWh
 Media type: CD-R/CD-RW

Reminders:

- Turn speakers back to ON when you are ready to hear your recording.
- Remember to remove your CD before returning the recorder.

AV ID:

What goes in the Marantz CDR300 Portable CD Recorder case?



Marantz CDR300 Portable CD Recorder



Remote



Power Supply



Mini Audio to Composite Audio Cable



Composite Stereo split to Composite Mono Cable Splitter



Stereo Composite Cable