



Marantz Portable Cassette Recorder PMD222

Instructions:

- 1 Insert the power cord into the 4.5 volt slot.
- 2 Place the cassette into the cassette deck and then hit the stop/eject button.
- 3 Press the rewind button and hold until tape clicks to show it is at the beginning.
- 4 Press the green play button to hear the recorded material. The tape will click when it reaches the end.

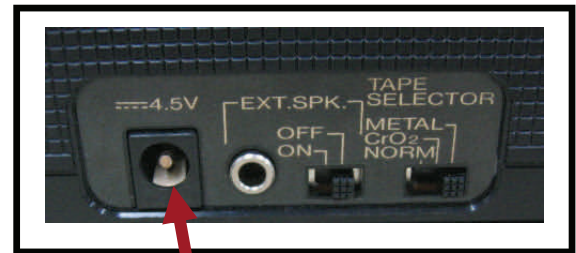

1 Power Source

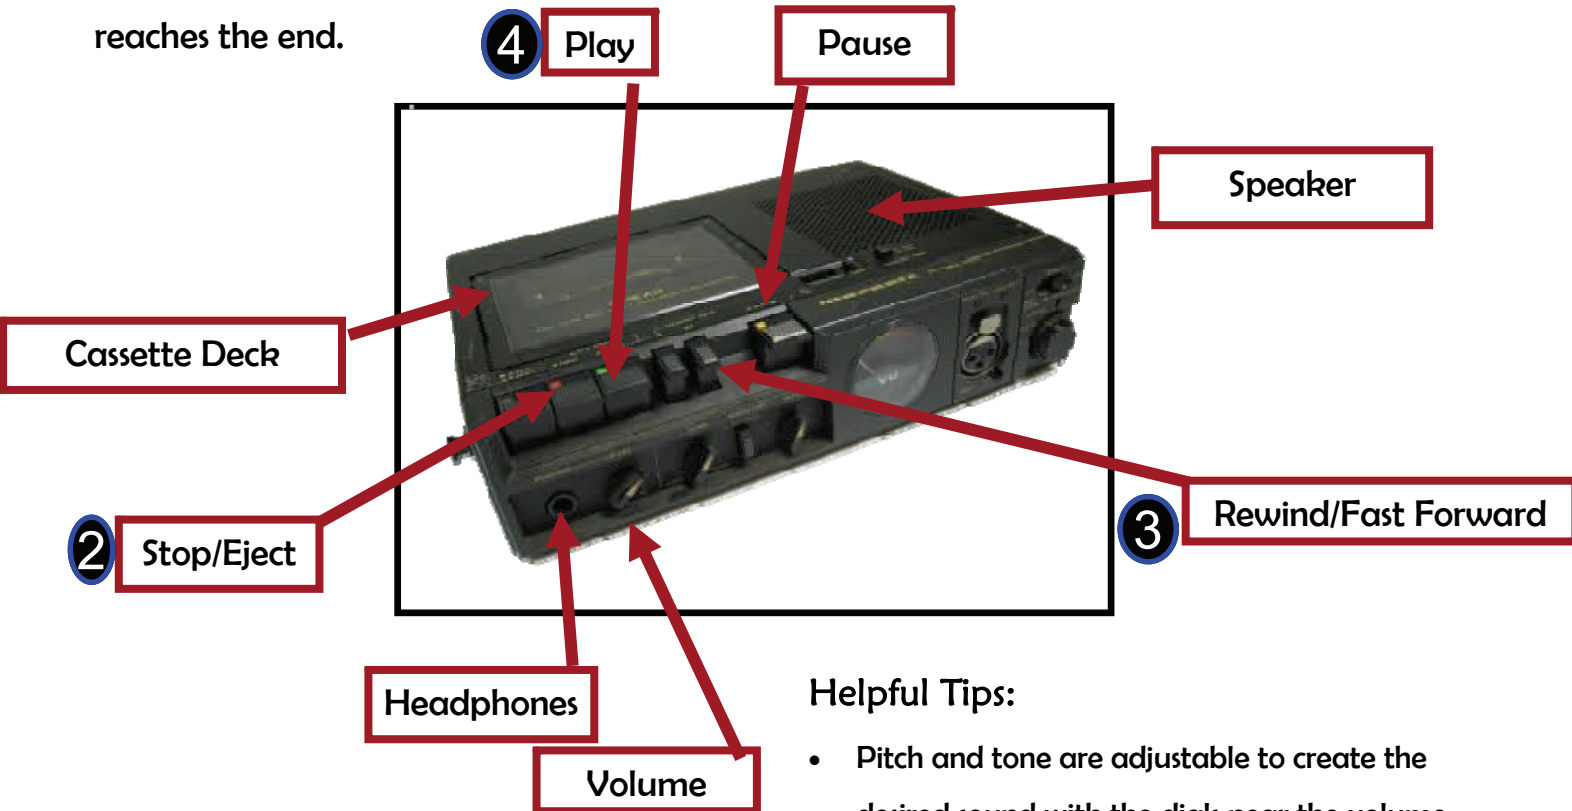

Helpful Tips:

- Pitch and tone are adjustable to create the desired sound with the dials near the volume dial.
- Can be used with 1/4 inch headphone jack.

AV ID:

What goes in the Portable Cassette Recorder case?



Omnidirectional Condenser
Microphone



Marantz AC Adapter



Preamplifier



Rechargeable Battery



Audio Cassette Recorder